

Main SMS commands

R : turn on/off a Node (wireless 230V socket) or other wireless extension

1234 **R011** = turn on or activate comfort temperature on Node #01

1234 **R010** = turn off or activate eco-temperature on Node #01

S : request status of a Node (or other wireless extension) by SMS

1234 **S01** = state of Node #01

1234 **S01 S02** = state of Nodes #01 et #02

L : thermostatic regulation

1234 **L011+06+20** = activation on Node #01, with eco-temperature at +6°C and comfort-temperature at +20°C

1234 **L010** = deactivate thermostatic regulation on Node #01

T : temperature surveillance

1234 **T011+04+22** = activation on Node #01, with lower limit at +4°C and upper limit at +22°C

1234 **T010** = deactivate temperature surveillance on Node #01

A : alarm activation

1234 **A0** = deactivate partially (useful in case of presence, to deactivate burglar and movement detectors)

1234 **A1** = activate completely (in case of absence)

1234 **A2** = deactivate completely (no detector nor temperature sensor remains active)

I : request information by SMS

1234 **I1** = stored phone numbers

1234 **I2** = active phone numbers

1234 **I3** = current alarm activation level

N, O : store, activate/deactivate a phone number in the list of alarm addressees

1234 **N10791234567#** = store a phone number (e.g. 0791234567) at the 1st position in the list

1234 **O12** = activate phone number stored at 2nd position

1234 **O02** = deactivate phone number stored at 2nd position


Several commands may be sent in a single SMS, e.g. to turn on a couple of Nodes, then request their new status, in order to confirm that everything has been received and processed correctly.

E.g.: 1234 **R011 S01 R021 S02** to turn on Nodes #01 and #02, then obtain their new status.

How to use the wireless remote control (RF keypad)

- **S01** = (Start/Stop) toggle between *on* and *off* or between *comfort* and *eco* modes on Node (or extension) #01.
- **A** = check current alarm level: red LED = alarm active; green LED = alarm partially deactivated.
- Toggle alarm levels: **A**, let the LED blink and then enter the personal access code.

Manual on/off control

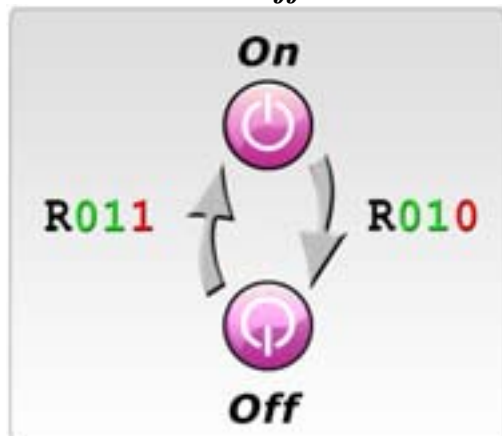

L011+06+20



L010



Thermostatic regulation

